

Ropox FlexiPlus

User manual

This manual should always be in close proximity to the product

Table of Contents

1.	Symbols used in this manual						
2.	General	safety	3				
	2.1	Product Unit label	5				
3.	General	requirements	6				
	3.1	Product information	6				
	3.2	Product description	6				
	3.3	Intended use	6				
	3.4	Intended population	6				
	3.5	Intended operator	6				
	3.6	Basic safety	6				
	3.7	Non-clinical functions	6				
	3.8	Product dimensions	7				
	3.9	Installation interfaces	8				
	3.10	Complaints and adverse events	8				
4.	Instructi	ons for use	9				
	4.1	Installation of product	9				
	4.2	Installation of countertop	16				
	4.3	Installation of Bluetooth adapter	18				
	4.4	Electrical component diagram	19				
	4.5	Ropox Connect App	19				
	4.6	Operating the product	19				
5.	Accesso	ries	20				
	5.1	Installation of accessories	20				
6.	Troubles	hooting	26				
7.	Cleaning		26				
8.	Maintena	ance	26				
	8.1	Periodic maintenance	26				
	8.2	Calibration of actuator	26				
9.	Compon	ent part list	27				
10.	Spare pa	rts list	29				
11.	Environ	nental protection	30				
12.	Electron	agnetic compatibility	30				
	12.1	Suitable Environments	30				
	12.2	Adjacent and stacked use	30				
	12.3	Cables	30				
	12.4	RF portable equipment	30				
	12.5	Compliance for emission and immunity standard	31				

1. Symbols used in this manual

Warning Symbol

Indication of potentially hazardous situation. If not avoided, it can result in serious injury or death.



Caution Symbol

Indication of potentially hazardous situation which may result in minor or moderate injury. It may also be used to alert against unsafe practices.



Notice Symbol

This symbol is used to notify correct use and handling of the product.



2. General safety



This manual must be read and understood before use. Always keep this manual in close proximity of the product.

The use, installation and service of this product must follow this manual to avoid accidents and serious personal injury.

Never use or handle this product in other ways specified in this manual as it can result in personal safety hazards and/or cause damage to the product.

Anyone installing and/or using this product either as operator or user should have the necessary safety information and access to this manual.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified designated person to avoid a hazard.



Do not perform repairs, disassembly, or assembly operations, add-ons, re-adjustments, or modification of the product beyond what is described in this manual. These must be carried out by Ropox or Ropox authorized personnel. Do not perform service while in use.

This appliance can be used by children aged from 8 years and above and people with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge if they have been given supervision, or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Do not use the product if it has defects or has become damaged before being repaired or replaced. If the control box makes unusual noise, or smells, switch off the mains voltage immediately.

Take care that the cables are not damaged.

Unplug the mains cable on mobile equipment before it is moved.

The products must only be used in an environment that corresponds to their IP protection.




The information in this manual is based on correct installation in accordance with installation instructions for this product.

Ropox cannot be held liable if the product is used in any way, that differs from stated in this manual and/or installation instruction.

Ropox reserve the right to amend this manual and reference documents without prior notice.

2.1 Product Unit label

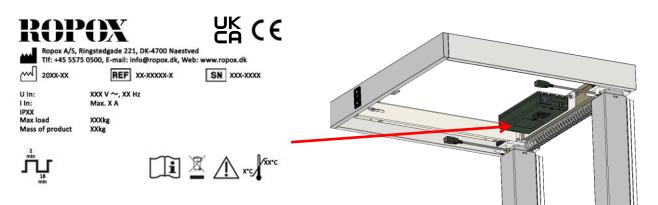

This product is UKCA-marked in accordance with: UK SI 2008 No. 1597 - The Supply of Machinery (Safety) Regulations 2008 amendments			
CE	This product is CE-marked in accordance with: Council Directive 2006/42/EC on machinery Council Directive 2011/65/EU, RoHS		
	Manufacturer name and address		
\sim	Date of production		
REF	Stock number		
SN	Serial number		
[]i	Consult manual before use		
1 min 9 min	Operating interval of electrically operated equipment. The use of electrical height adjustable equipment can run at maximum 1 minute, followed by a 9-minute break.		
\triangle	Consult manual for important safety related information, warnings, and safety precautions.		
	Do not dispose as unsorted municipal waste. Product must be returned to a designated recycling station.		
10°C	Operating temperatures may not exceed +10°C - +40°C Transport and storage temperatures may not exceed -10°C - +50°C		

3. General requirements

3.1 Product information

Manufacturer	Ropox A/S Ringstedgade 221, DK-4700 Naestved +45 55 75 05 00 Email: Info@ropox.com			
Product models	Part number	Model	Configuration	
	30-90xxx	60 – 300 cm	Electrical	
Maximum user weight	60 – 240cm = 100kg (220lbs) evenly distributed			
according to DS/EN 12182:2012	2 245 – 300cm = 150kg (330lbs) evenly distributed			
	Max load includes weight of tabletop and other installations			
Power supply	100-240V ~50/60Hz			
l in	3A			
Standby power	0,1 W			
Intermittence	1min use / 9min break			
Height adjustment	300mm (11.8in)			
Speed of actuation	≈ 36mm/s (1.5in/s)			
Ambient temperature range	-10 °C to +50 °C Transport and storage			
	+10 °C to +40 °C Operation			

3.2 Product description

Ropox FlexiPlus is a height-adjustable system for tabletops or workstations. The product can be adjusted in height electrically.

3.3 Intended use

The product is intended for height adjustment of a tabletop or workstation for easier and more comfortable use by people with differing heights and statures. Standard stroke length -300mm (11.8in), but with an option to customize stroke length between 0mm - 660mm (0 - 26in).

3.4 Intended population

Anyone who can find use in having a tabletop or workstation with an adjustable height.

3.5 Intended operator

Anyone who has read and understood this manual can use the product. Only children over the age of 8 may use the product, however, only under the supervision of an adult.

3.6 Basic safety

Ropox FlexiPlus has a built-in anti-collision system called Ropox Sicuro, where, if the product registers an increase in resistance during operation, either up or down, the legs will retract (approx. 50mm (2in)).

Additionally, it's possible to buy what's called a safety-stop. This is a safety system that works in tandem with Ropox Sicuro, that is especially sensitive and is better at registering soft material. The safety-stop is placed underneath the table, at the edge, which makes it optimal for seated users.


3.7 Non-clinical functions


Ropox FlexiPlus is designed to make use of tabletops and worktops comfortable and easier to access for the intended population.

3.8 Product dimensions


Aluminum profile is always 50mm (2in) shorter than tabletop.

It is <u>recommended</u> to keep 50mm (2in) of clearance below the wall bracket.

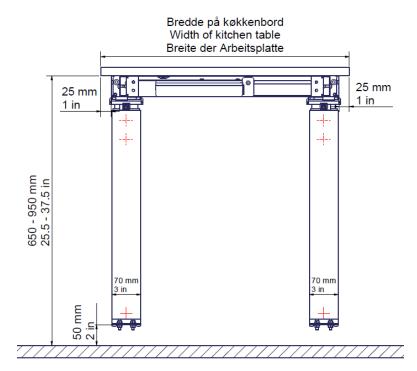

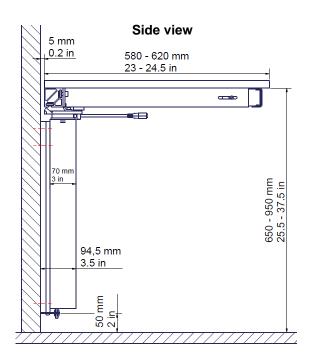


245 - 300cm (96.5 - 118in)

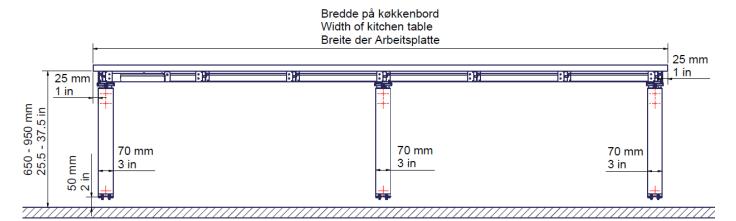


3.9 Installation interfaces

- Minimum area for reinforcement of wall. Wall must be suitable for screw mounting.
- Area for electrical and plumbing installations.

60 - 240cm (23.5 - 94.5in)

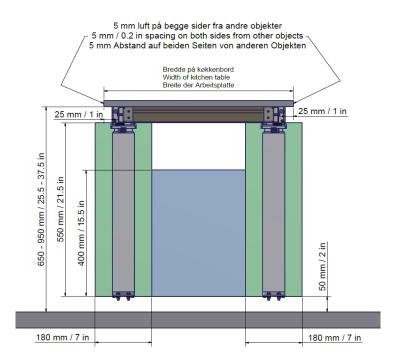

245 - 300cm (96.5 - 118in)

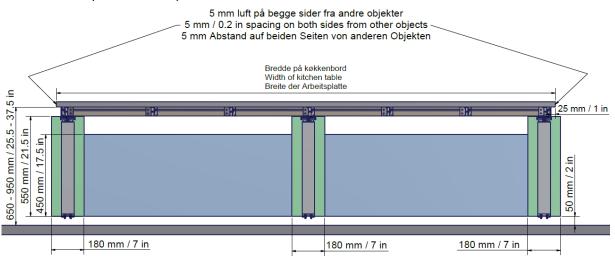


3.10 Complaints and adverse events

Any serious incident that has occurred in relation to the use of the product, should be reported to the manufacturer and the competent authority of the Member State in which the user is located.


4. Instructions for use

4.1 Installation of product

30*65100-060 -	1	Alu. profile and support arms			2
30*65100-300					
30-67610-1	2-3	FlexiPlus Leg, Electric			1
PART NUMBER	QTY	TITLE	L	В	ITEM

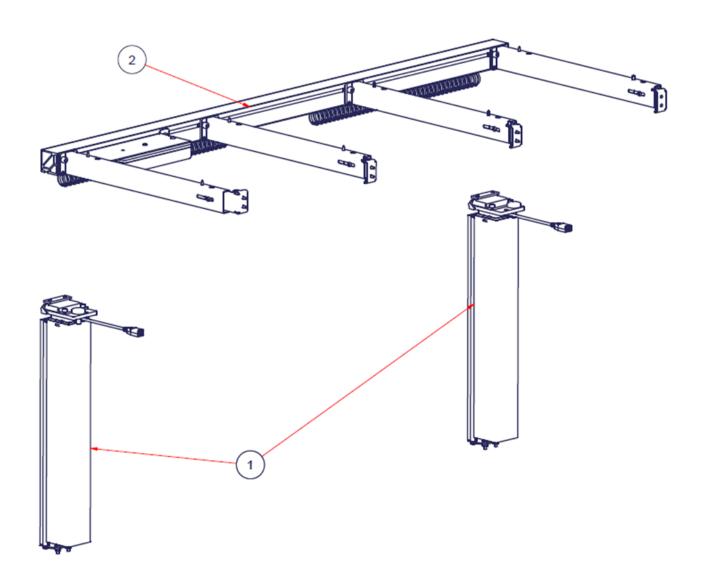


4.1.1 Mark these two points for leg installation

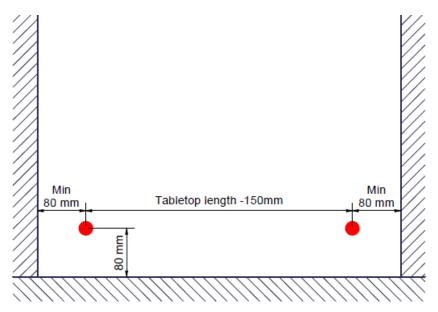


Keep a minimum distance of 80mm (3in) to fixed objects next to tabletop. Be aware of countertop overhang.

4.1.2 Attach wall brackets in the points marked out


If needed, use rawlplugs. Max pull-out force in top screw is 30kg (66lbs). Make sure that there is at least 170mm (7in) of clearance above the wall bracket.

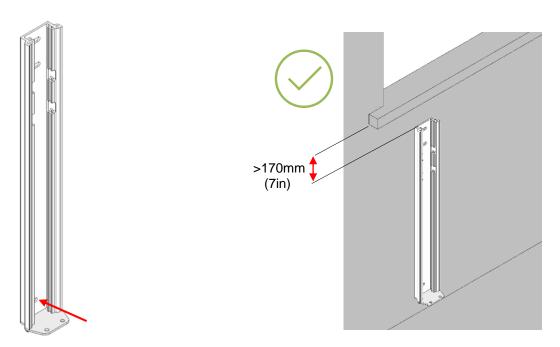

 4.1.3 Plumb the wall brackets and attach top screws



4.1.4 Slide motor columns in wall brackets

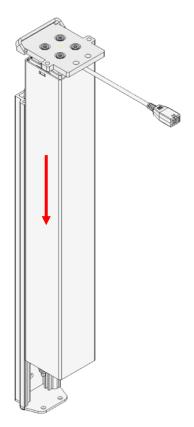


<u>4.1.5</u>


Mount support arms on profile

At each motor column, a support arm should be placed on top of the adjustment screw.

Do note, that the inner support arms must not be more than 60cm (23.5in) apart. Also note that the outermost support arms must face inwards with their outer bracket. This is done by unscrewing the bracket.

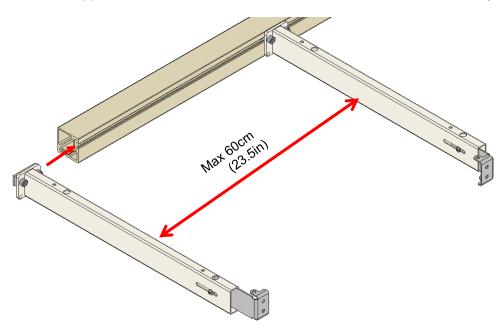


4.1.6 Mount the bracket with flatnut on the profile in each end Tighten the bottom screws to fasten the bracket.

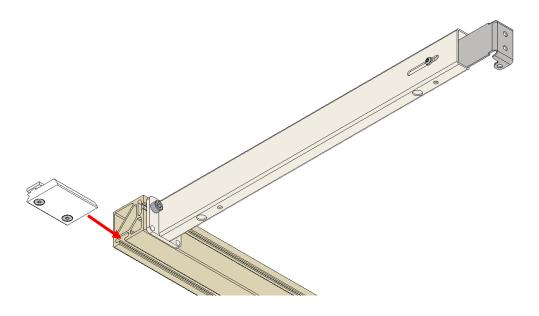


4.1.7

Mount the profile and adjustment screw on the leg


Mount adjustment screw first. Use tightening plate and two M6x12 screws. Adjustment screw is mounted in line with where the support arm is placed.

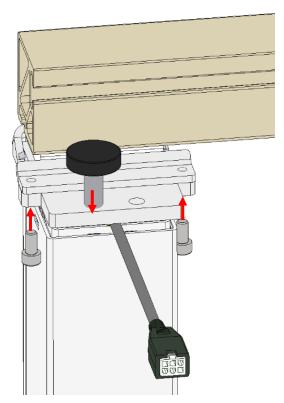


<u>4.1.8</u> Level out the system by adjusting the nut at the bottom of each motor column

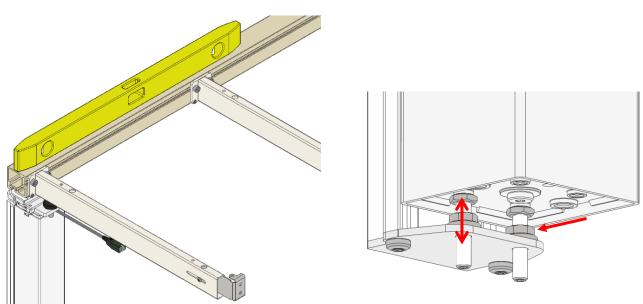


 $\frac{4.1.9}{\text{Lock}}$ the system by securing the retainer nut at the bottom of each motor column

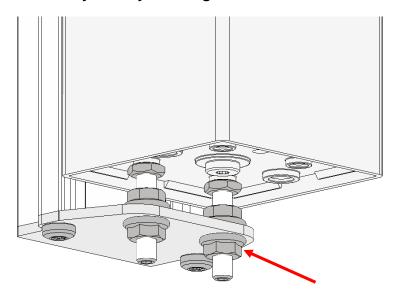


4.1.10 Attach the control box to the profile

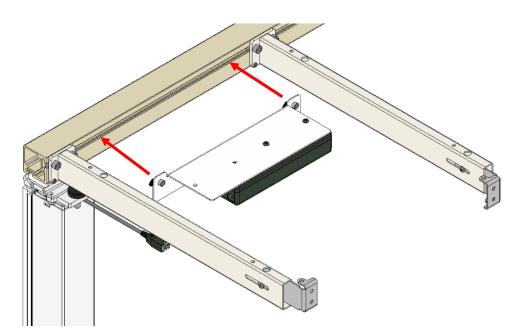

4.1.11 Connect cables to the control box and do a test run Zero out the system by holding the down button until the columns have initiated a reset.

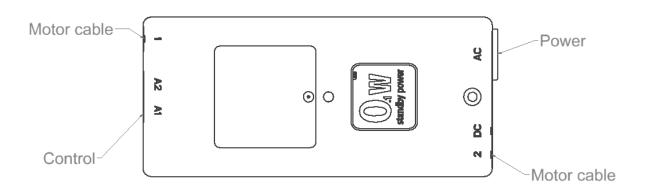


 $\underline{\textbf{4.1.12}}$ Mount the cable hangers on the profile, and manage the cables

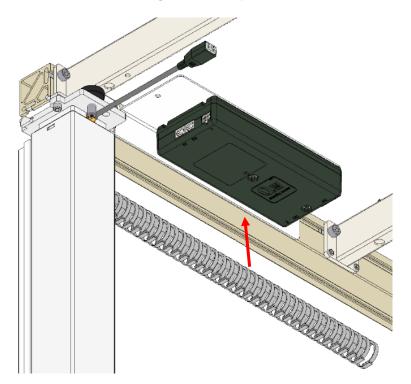


4.2 Installation of countertop

4.2.1 Place countertop and secure it to the support arms
Keep a safe distance of 5mm (0.2in) to the wall.

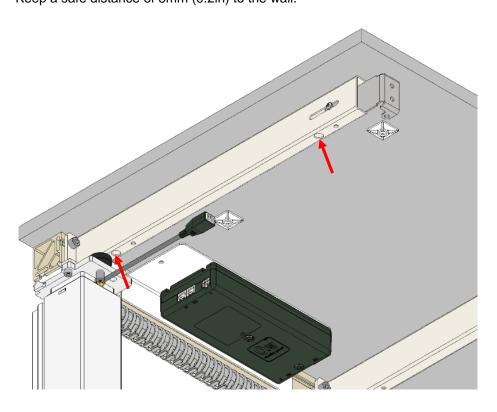

4.2.2 Safe distances between moving parts


If the distance of 5mm can't be upheld, the following illustration should be followed instead, to avoid any crushing hazards.

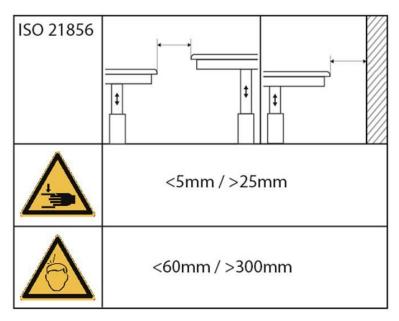


4.2.3 Attach front fascia and side fascia if needed Before mounting side fascia, mount the angle fittings on the fascia.



It's recommended to mount side fascia flush with the worktop to avoid entrapment.

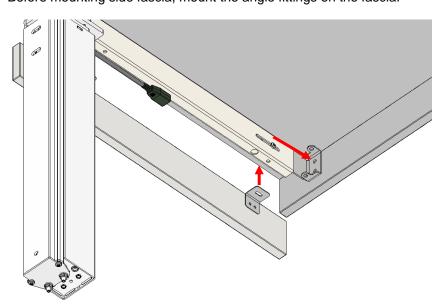

4.2.4 Level the system by adjusting the adjustment screw and set screw on each leg by means of a hex key

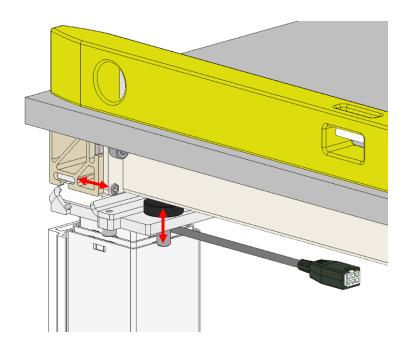

♠

Warning!

When mounting a hob in the tabletop, remain aware of the dangers hereby:

 
<u>Gas hob</u> – Always be aware of the movement of the table together with the gas hoses. If these are obstructed during the movement, this can lead to gas leakage, which can be deadly!


<u>Induction hob</u> – Always be aware to not bring radio equipment any closer than 30cm to the hob, this includes pacemakers!


4.2.5

Mounting the press pad

- Drill a Ø12-15 (Ø $^{1}/_{2}$ "- Ø $^{5}/_{8}$ ") hole in the front fascia Pull cable through hole in front fascia and connect the press pad, via the press pad cable, to the control box
- Mount the cable mounts on the underside of the tabletop and strap the cable to them
- Carefully remove the protection paper, on the back of the press pad, while keeping your finger between the cable-ribbon and the adhesive, as these mustn't stick to each other



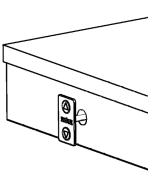

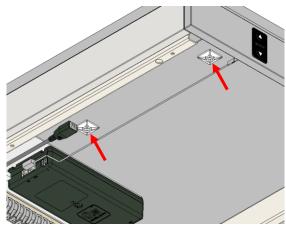



Notice!

If the cable-ribbon sticks to the adhesive, the press pad might be destroyed.

4.3 Installation of Bluetooth adapter

With a purchase of Ropox FlexiPlus, as a standard component, a Bluetooth adapter will always accompany the product. This Bluetooth adapter allows the user to remotely connect to FlexiPlus using our app, Ropox Connect, or with the wireless control, that can be acquired as an accessory.

To mount the Bluetooth adapter, follow the instructions below.

4.3.1 Mounting the Bluetooth adapter



Insert the Bluetooth adapter into 1 of the 2 available control ports in the control box




After the Bluetooth adapter has been inserted, it will blink blue and is ready for pairing



Note! It is recommended, when multiple products need to be connected, that 1 adapter is inserted at a time, and then saved.

4.4 Electrical component diagram

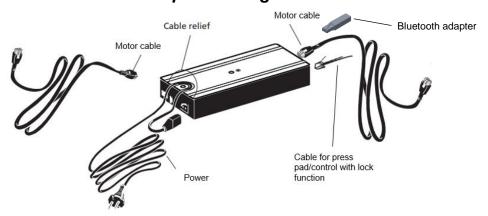

4.5 Ropox Connect App

As an option for operating Ropox FlexiPlus, it's possible to download the free Ropox Connect App, which makes it possible to operate the product wirelessly. The Ropox Connect App allows you to operate the product upwards or downwards and has the option of saving height settings, allowing users to easily change from a standing height to a sitting height. To see an expanded explanation of functions, accessibility settings, and more, see the enclosed manual, TF 200.0039.

To download the Ropox Connect App, follow the instructions below:

4.5.1

How to download the Ropox Connect App

For iOS

- 1. Scan the QR code or open the app: App Store.
- 2. In the App Store, press 'Search'.
- 3. Search for "Ropox Connect".
- 4. Find the Ropox Connect App, and press 'Get'.



4.6 Operating the product

The product is operated with the up / down button provided, or wirelessly with the Ropox Connect App. Alternatively, if a control with lock function is installed, see 5.1.3.



Warning!

The product should always be able to travel the full range of actuation without colliding with objects. Failing to do so will compromise the product stability.

Special care should be taken in ensuring that no children or adults are placed under the product, as severe injury from entrapment may occur.


5. Accessories

Accessories			
Item Number	Model/specification		
30-92xxx	Safety strip		
30-90550-1	Control with lock function		
30-90540-1	Wireless control		
30-90600-1	Increased Load +50kg (110lbs), Order with frame		
30-90601-1	Increased Load +50kg (110lbs), Order separate from frame		
30-67610-1	Extra leg		
30-67635	Cover for plumbing		
30-67760	Bracket for coverplates		
30-67705	Supporting Foot 49cm/19in Long		
30-90530	70mm/3in distance bracket		
30-93050 – 30-93660	Height adjustable programming, 50 – 660mm (2 – 26in)		

5.1 Installation of accessories


5.1.1 <u>Installation of safety strip</u>

• To mount the safety strip, see Safety Strip for FlexiPlus, TF 200.0043.

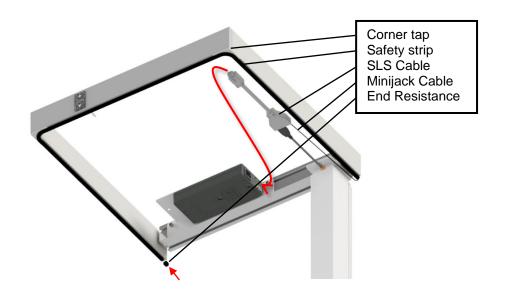

5.1.2 <u>Installation of control with lock function</u>

- For ease of installation, before mounting a front fascia, pre-drill two holes in the tabletop for the control.
- Mount the control with lock function on the bottom side of the table, by means of two Ø
 4.5mm countersink screws. It is recommended that the tilted part of the control is outside the fascia, as shown below.
- Connect the control to the control box.
- If a fascia is needed, cut out a small indent in the front fascia that measures 20x67mm (0.8x2.6in). The control can be mounted further in on the tabletop than recommended. If it is, it is recommended to increase the height of the indent to 35mm (1.4in). Mount the fascia.

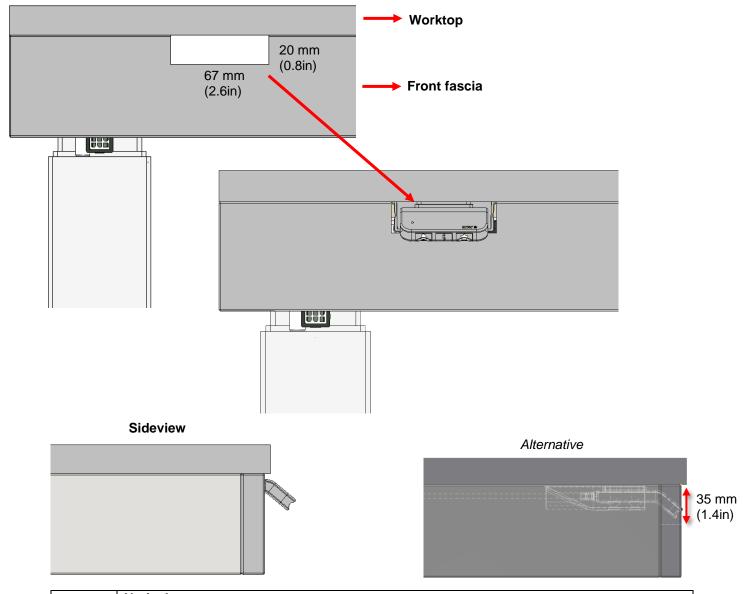

!)

Notice!

DO NOT attempt to mount the control with lock function on a hard tabletop such as glass or stone, with screws.

5.1.3 Use of the control with lock function

The control will lock again after 10 seconds if the control is not activated.

UP/DOWN

Driving the motor columns up or down, is done by first unlocking the control, then pressing on the control from above or below.


• DIFFERENT BUTTONS

The control with lock function comes with three built-in buttons other than up/down.

Bluetooth® - Bluetooth connectivity. DISABLED as per standard.


- Changes favorite position

- Holding down the button for 2 seconds will save the current height.
 2 positions can be saved at a time.
- Holding down the button for 8 seconds will reset the favorite positions, showing a red LED.
- When driving the motors to the favorite position, the motors will stop for 1 second when it is at a favorite position before continuing, if the Up/Down is continuously held.

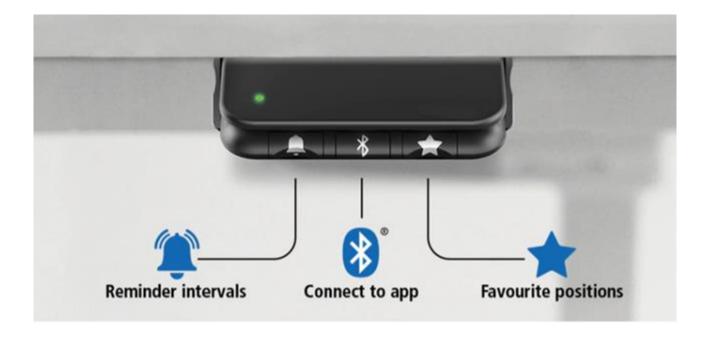

5.1.4 <u>Installation of wireless control</u>

- Before the wireless control can be connected to FlexiPlus, the Bluetooth adapter must be in pairing mode, see 4.3.1.
- If the Bluetooth adapter has been inserted into the control box, but isn't in pairing mode, demount the Bluetooth adapter, then reinsert it.
- Take the wireless control and hold both UP/DOWN at once, for a few seconds.
- The system can now be remotely controlled with the wireless control.

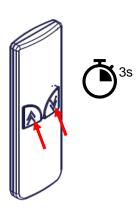

5.1.5 <u>Installation of increased load</u>

For FlexiPlus frames 60 - 240cm, the load capacity can be increased by 50kg (110lbs) by choosing this accessory. Dependent on if the accessory is chosen at the time of ordering together with the frame, or afterwards, two different item numbers must be used.

- 30-90600-1 for order with the frame.
- 30-90601-1 for order separate from frame.
- If the increased load is ordered with the frame, this installation manual should be followed as normal.
- If the increased load is ordered afterwards, follow the guide Increased Load 50kg for FlexiPlus, TF 200.0056.




5.1.6 <u>Installation of cover for plumbing</u>

- BEFORE CHOOSING THE COVER FOR PLUMBING, decide upon your desired height adjustment. If the chosen height adjustment is greater than standard (300mm (11.8in)), this accessory cannot be used.
- To mount the cover for plumbing, follow the guide Mounting Instructions: Installation cover for Flexi, PDF 6134.




5.1.7 <u>Installation of brackets for cover plates</u>

- BEFORE CHOOSING THE BRACKETS FOR COVERPLATES, decide upon your desired height adjustment. If the chosen height adjustment is greater than standard (300mm (11.8in)), this accessory cannot be used.
- To mount cover plates with the brackets, follow the guide Concealment panels for Ropox Flexi, PDF 6163

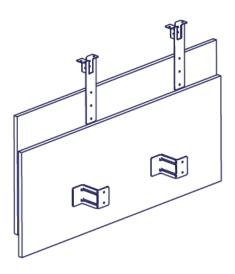


5.1.8 <u>Installation of support foot</u>

- NOTICE support foot can only be used if the wall bracket is mounted between 44-58mm (1.7–2.3in) above the floor.
- BEFORE MOUNTING THE MOTOR COLUMNS ON WALL BRACKET, place the foot on the bottom of the motor columns.
- Mount the foot with the supplied M8x20 bolts in the two holes.

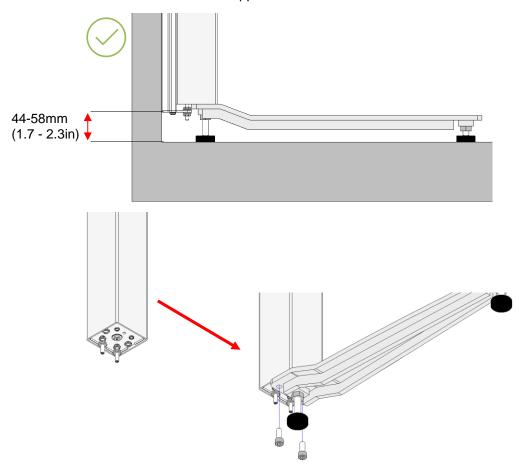

5.1.9 Installation of 70mm/3in distance bracket

 To mount the distance bracket, follow the guide 70mm/3in distance bracket, TF 200.0021.

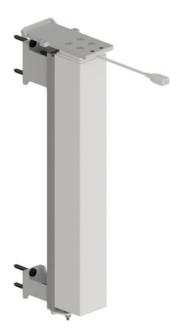

6. Troubleshooting

	Check all cables and plugs for loose connections
The frame cannot be height adjusted	If a safety strip has been fitted: Check that the safety strip has not been activated
	Check connection of cables for safety strip to
	control unit and safety strip
	Resetting the frame:
	Press the DOWN button and adjust the frame to
The frame only goes down	bottom position. Press the DOWN button once
	more and keep it pressed for 5 sec to reset the
	control unit
	Press the DOWN button and adjust the frame to
The frame date wat make attackable	bottom position. Press the DOWN button once
The frame does not move straight	more and keep it pressed for 5 sec to reset the
	control unit

7. Cleaning

Cleaning can be done with lukewarm water and a suitable all-purpose cleaning agent. Use a cloth or soft sponge to wash the product. Dry the product off with a wrung cloth.

Notice!



Do not use cleaning agents containing abrasives e.g. scouring powder, steel wool, scouring sponge.

This product is not designed to be sterilized. Autoclaving and sterilization beyond normal cleaning may possibly change the product safety and function.

8. Maintenance

8.1 Periodic maintenance



Notice!

The frame is maintenance-free. For reasons of safety and reliability, we recommend inspection of the frame once a year.

8.2 Calibration of actuator

Actuator(s) are aligned and calibrated from the factory. In case they need calibration to run simultaneously, use the following procedure.

Press and hold DOWN on the hand control (▼) until the frame is in the bottom position. Keep holding down the DOWN button until the table has completed the reset sequence.

If motor columns are out of alignment (>=5mm (0.2in)), the system will detect it, stop, and will then need to be reset, by completing a reset sequence.

Component part list



Notice!

Ropox will make part lists available for extraordinary maintenance and repair beyond what is described in this manual. Repair beyond what is described in this manual may only be done by Ropox designated service personnel.

Parts included



2-3x Motor column incl. mounting bracket 30-67610-1

Includes Wall bracket 30*67608-148 30*67608-179 95091439

Adjustment screw M10x25 96101125



Bracket w/flatnut 30*67608-165 30*67608-225 95020621



Tightening plate 30*67608-167



INSEX Screw M6x12 95010612



Flange nut M6 95180067



Cable hanger



1x Aluminum profile [specific length] 30*65100-XXX



Worktop L 60-100cm (23.5-39.5in) Worktop L 105-200cm (41-78.5in) Worktop L 205-240cm (81-94.5in) Worktop L 245-300cm (96.5-118in) 30-67620-9

2x Support arms 4x Support arms 5x Support arms 7x Support arms

230V Control box 2ch incl. mounting bracket -For 2x motor columns

30*67608-220





Includes press pad, cable, and adapter 97000244 97000256 97001778

120-240V Control box 3ch incl. mounting bracket -For 3x motor columns

30*67608-221





Includes press pad, cable, and adapter 97000244 97000256

97001778



4x Angle fitting 97002730

1-2x Motor cable 100 cm (39.5in)

93000068

1x Motor cable 200 cm (78.5in), for worktop length 165-300cm (65-118in)

93000069

1x Power cable 320 cm (126in)

93000006



2x Cable mounts 96000155




2x Cable ties



14x INSEX Set screw M8x10 95030810

10. Spare parts list

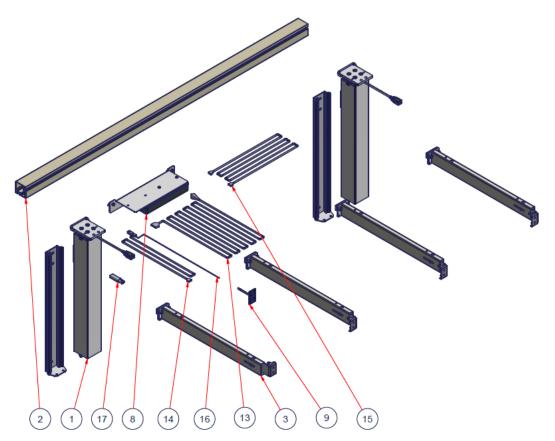

Spare parts

97001778		Bluetooth adapter			17
97000256	1	Press pad cable			16
93000069	1	Motor cable 200cm (78.5in), for			15
		lengths >160cm (63in)			
93000068	1-2	Motor cable 100cm (39.5in)			14
93000006	1	Power cable			13
97000244	1	Press pad			9
93000198	1	Controlbox 3ch, for 3 motor			8
		columns			
93000199	1	Controlbox 2ch, for 2 motor			8
		columns			
30-67620-9	2-7	Support arm			3
30-65100-XXX	1	Aluminum profile			2
93000210	2-3	Motor column			1
PART NUMBER	QTY	TITLE	L	В	ITEM
1		Ropox FlexiPlus Spare parts		Designer OU	06-10-2021
3		Ropox Flexii ius opare parts		DS/ISO 2	768 m
4					
5		Better ways to be	etter days	Drawing no.:	
Page 1 of	1	Better ways to better days Ringstedgade 221, 4700 Næstved Tit: 55750500 Fax: 55750550 30-90XXX-		(X-1	

11. Environmental protection

The product is not intended to be disposed as municipal waste. Proper disassembly, sorting and disposal of components must be done by waste disposal professionals.



Part	Disposal recommendation
Aluminum profile	Aluminum
Motor column	Electronics
Support arms	Steel waste
Control box	Electronics

12. Electromagnetic compatibility

12.1 Suitable Environments

The device is suitable for use at home, at daycare centers, at day centers for people with physical or mental disabilities or at hospitals except near active HF surgical equipment and the RF shielded room of a medical electrical system for magnetic resonance imaging, where the intensity of electromagnetic disturbances is high.

12.2 Adjacent and stacked use



Warning!

Use of this equipment stacked with other equipment should be avoided because it could result in improper operation. If such use is necessary, this equipment and the other equipment should be observed to verify that they are operating normally.

12.3 Cables

Motor Cable – 93000068	100 cm (39.5in)
Motor Cable - 93000069	200 cm (78.5in)
Power Cable - 93000006	320 cm (126in)
Press pad Cable - 97000256	150 cm (59in)



Warning!

Use of accessories, transducers, and cables other than those specified or provided by the manufacturer of this could result in increased electromagnetic emissions or decreased electromagnetic immunity of this equipment and result in improper operation.

12.4 RF portable equipment



Warning!

Portable RF communications equipment (including peripherals such as antenna cables and external antennas) should be used no closer than 30 cm (12 inches) to any part of the device, including cables specified by the manufacturer. Otherwise, degradation of the performance of this equipment can occur.

12.5 Compliance for emission and immunity standard

The product consists of electrical components that are tested and found compliant according to EN 60335-1 House and similar electrical appliances – Safety – 1: General requirements. The control box has likewise been tested and found compliant according to EN 13849-1 Safety of machinery – Safety-related parts of control systems – 1: General principles of design.

