

”For maximum safety”



SMARTBOX

ROPOX SAFETY STOP INTEGRATION BOX

Safety is of the essence, when investing in an electrical height adjustable kitchen system.

We recommend that all Ropox upper cabinets (VertiElectric, VertiInside, Diagonal) are supplied with a safety stop plate to avoid trapping when moving the cabinets down.

The Ropox table tops system (FlexiElectric) should be supplied with a safety strip to avoid trapping when moving downwards.

Upwards movement:

If trapping can occur through upward movement of a worktop:

- With an adjacent worktop
- With a wall unit above

.....then at least two smart boxes should be used.




WHEN AND HOW TO USE THE SMART BOXES:

After installation of all the Ropox products in the kitchen, all Smartboxes must be connected via a communication cable. (A Smart box is needed for each kitchen frame, where there is a risk of trapping from two or more moving frames)!

A product with the activated safety stop will immediately reverse movement of either frame, and afterwards the system may only move clear of the trapping point.


When a safety stop is activated in the system, the Smartbox to which the safety stop is connected will start flashing. Thus, it is easy to identify the activated safety stop and to solve the problem.

ROPOX SAFETY STRIP FOR TABLE TOPS

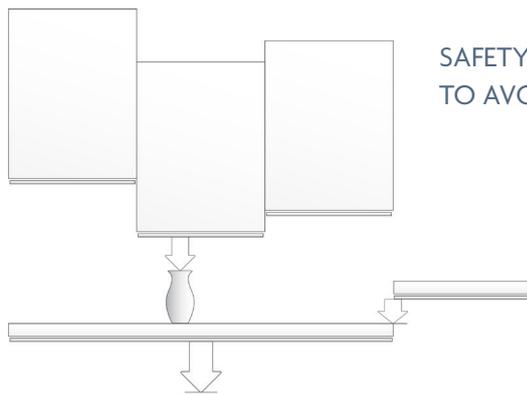

SAFETY STOP INSTALLED TO AVOID TRAPPING

ROPOX SAFETY PLATE FOR UPPER CABINETS

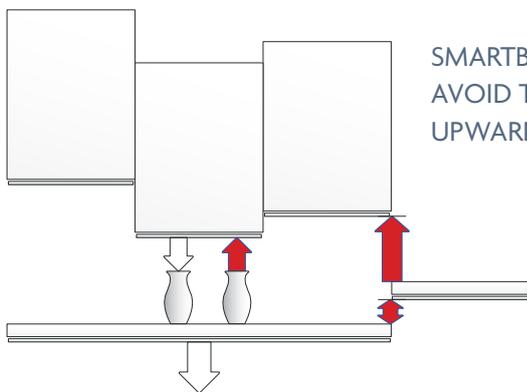

SMARTBOX INSTALLED TO AVOID TRAPPING DURING UPWARDS MOVEMENT *

There is information regarding measures, technical data, installation and much more on the product on our website.

* Disclaimer; *only applies when table top or cabinet moves up into another smartbox-connected safety strip or safety stop plate*.