

Infrared remote 30-67847-9

User Manual



Keep this folder with product at all times!

30-67847-9 Infrared remote, one channel (IRR-DSK-SET-LIGHT)


Preparation

Place the two batteries (R03 AAA) in the handset.

Connect the receiver to the motor control (HS – connector). The bottom side of the receiver is coated with an adhesive, for easy installation.



Connect the receiver to HS input

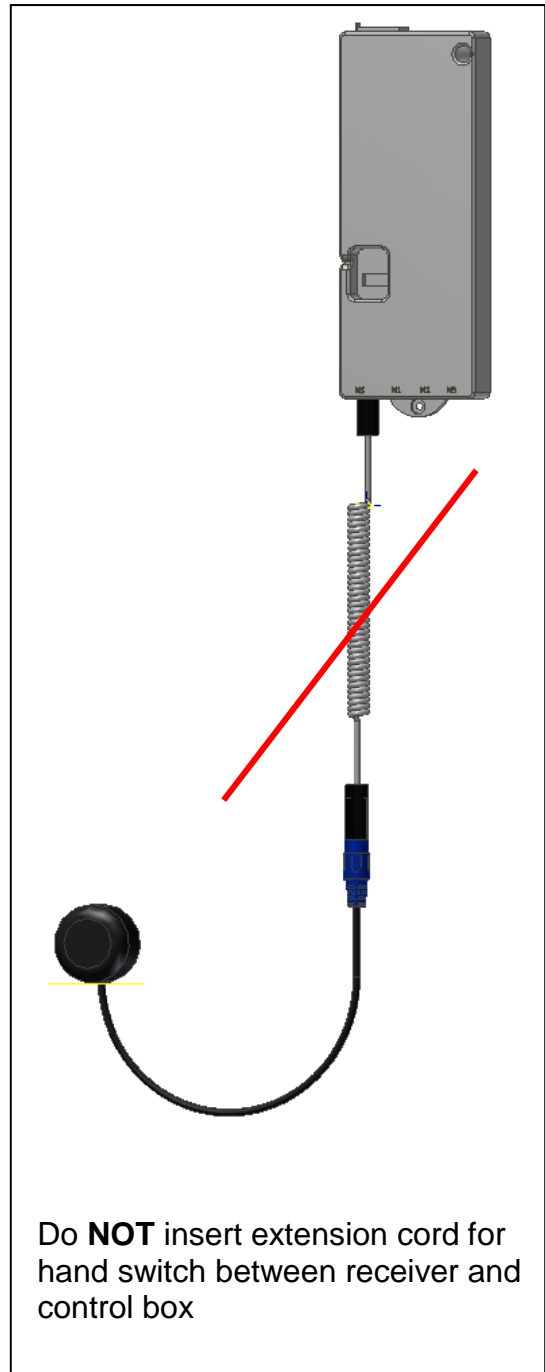


Channel selection


The handset allows operation on only one channel. Channel 1

Channel Selection (Receiver):

The switch on the receiver must be in its left position, channel 1 is selected

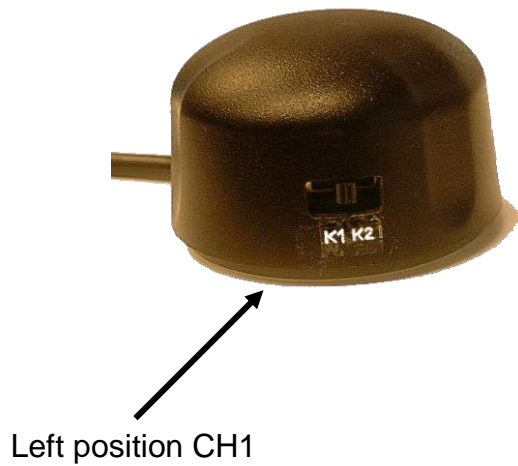


Functionality:

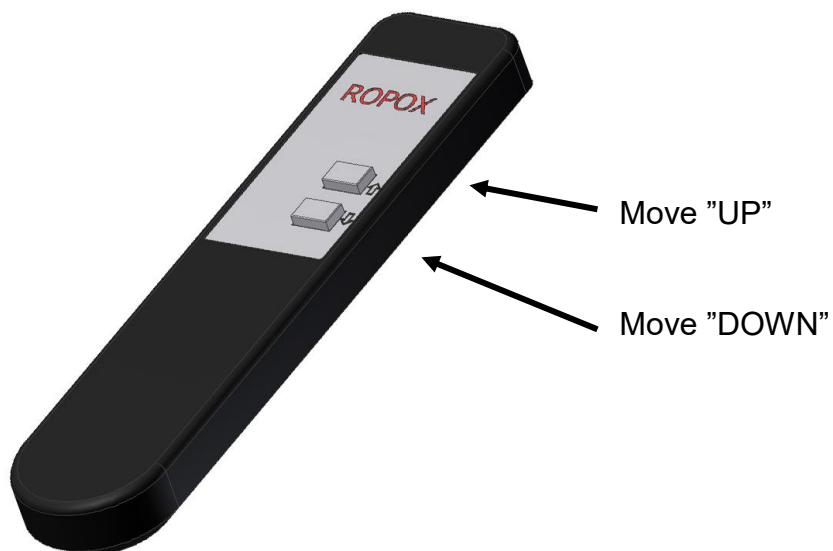

Driving Up/Down

With the buttons up ("↑") and down ("↓"), the motor control box starts the drives in the respective direction.

Mounting of infrared remote with Smartbox

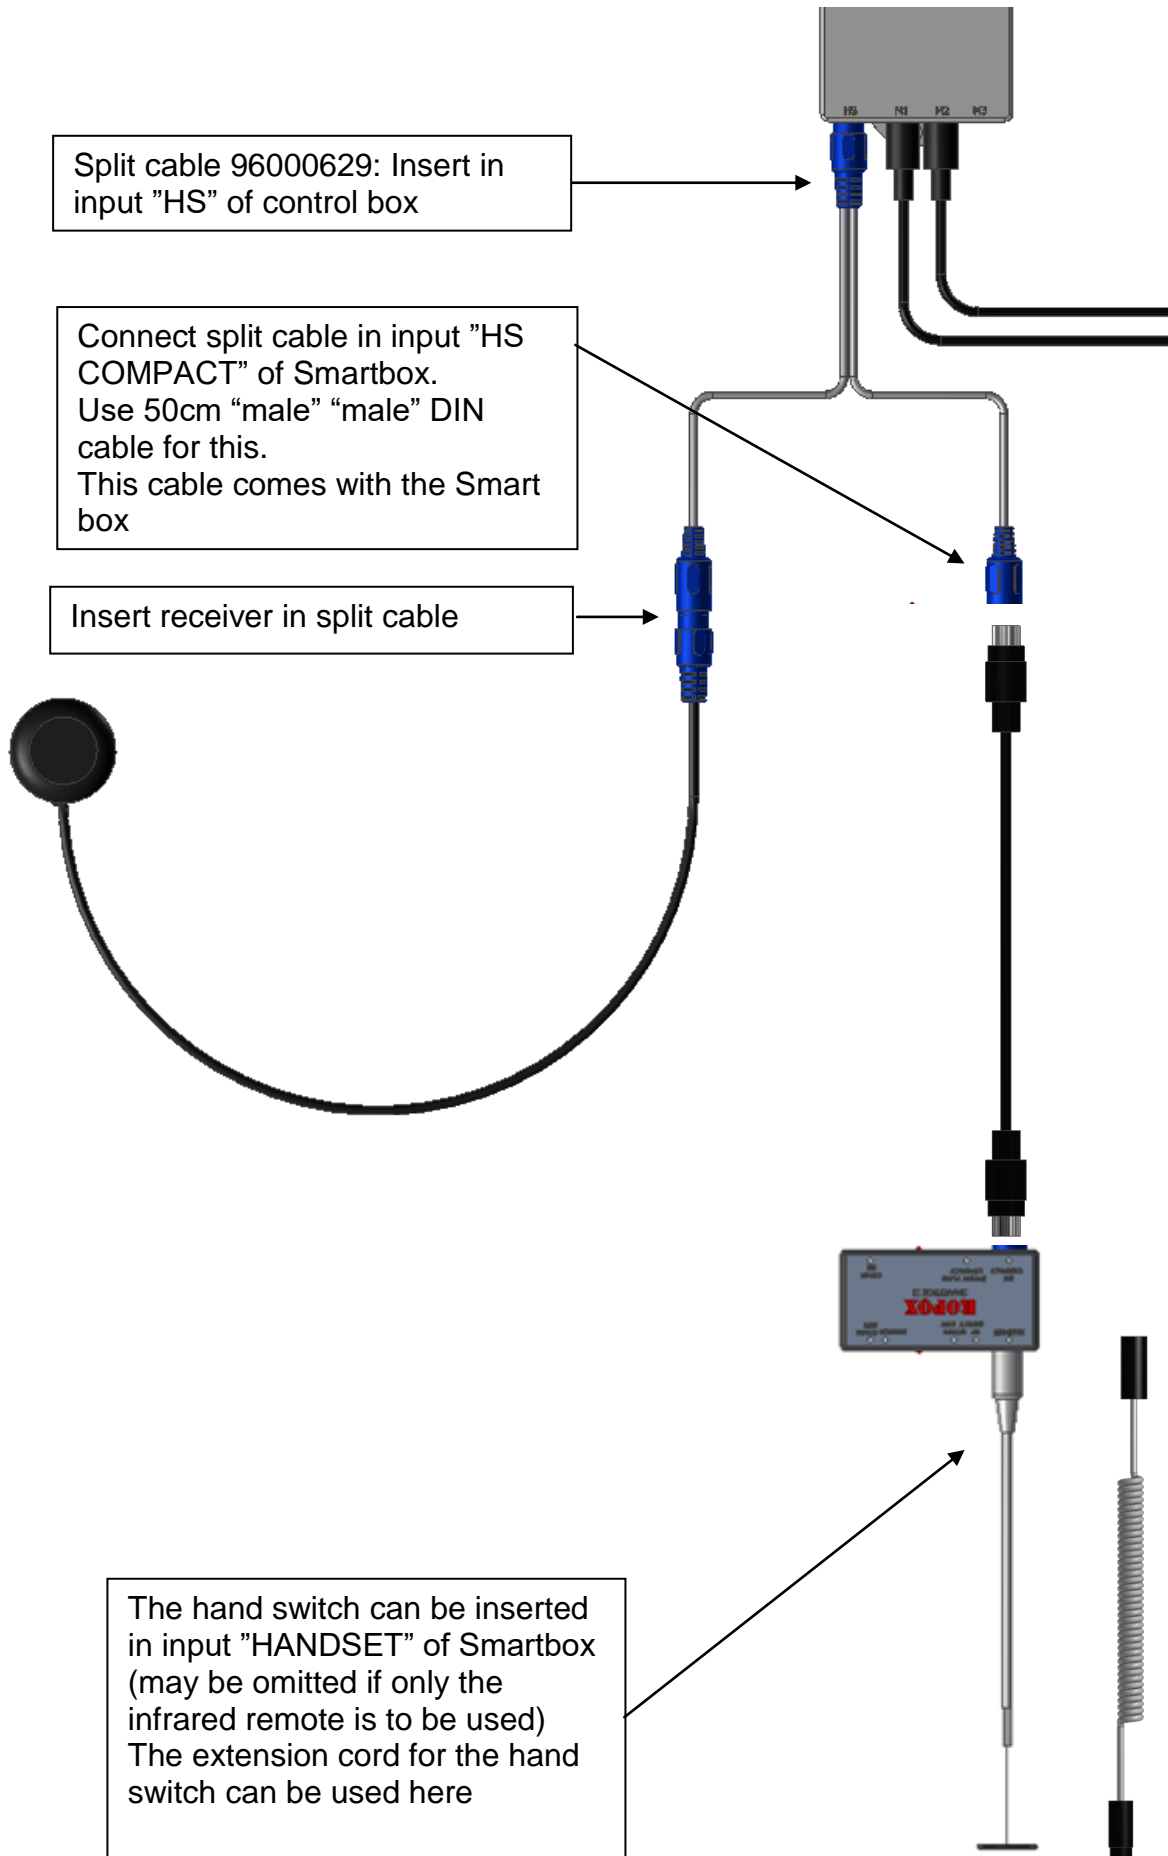

Complaints

See General Terms of Sale and Delivery on www.ropox.com



ROPOX A/S

Ringstedgade 221
DK – 4700 Naestved

Tel.: +45 55 75 05 00 Fax.: +45 55 75 05 50

E-mail: info@ropox.dk

www.ropox.com