

Ropox Basket unit

Mounting Instructions

User Manual

Keep this manual with the product at all times

Contents

1. Technical data.....	3
2. Models.....	4
3. Dimensions.....	4
4. List of components.....	5
5. Mounting instructions.....	7
6. Cleaning/ maintenance.....	10
7. Complaint.....	11

1. Technical data


Product name:	Ropox Basket unit
Item numbers:	50-50696 – Ropox Basket unit with wash basin 50-50697 – Ropox Basket unit without wash basin
Working height:	95 cm
Material:	Steel 37
Table top and side covers:	Compact Laminate
Surface treatment:	Powder coating
Max. load on frame (static):	30 kg evenly distributed over the table top
Complaint:	See Complaint
Manufacturer	Ropox A/S, DK-4700 Næstved, Tel.: +45 55 75 05 00 e-mail: info@ropox.dk , www.ropox.dk

2. Models


With wash basin



Without wash basin

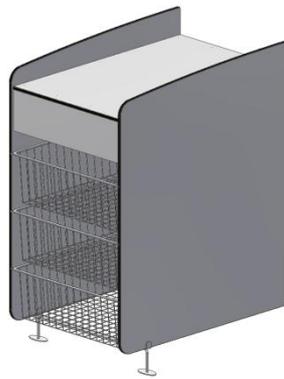


3. Dimensions

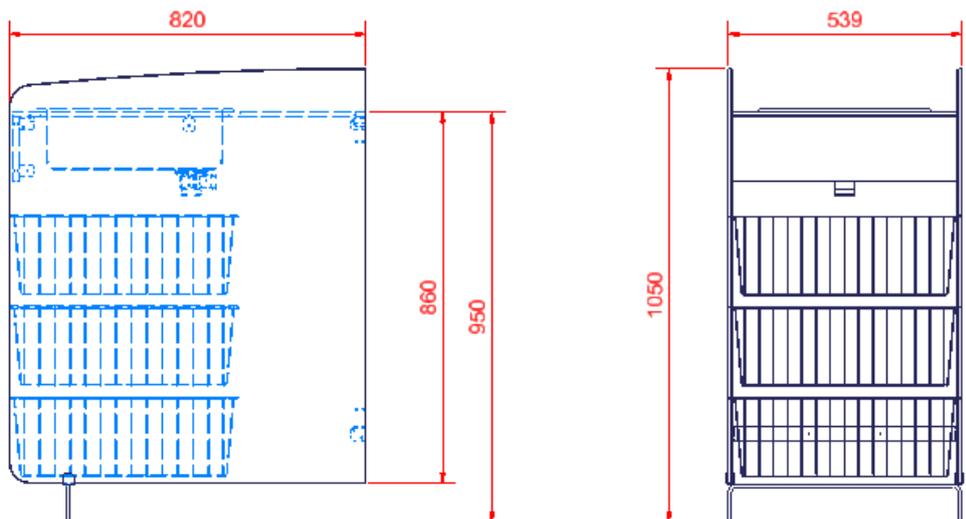

4. List of components


Side cover left 1 pc.

Item number: 50*50670-211

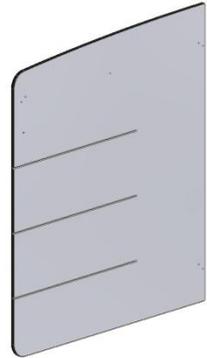

Side cover right 1 pc.

Item number: 50*50670-212

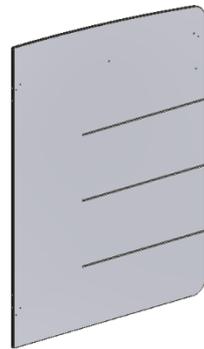

Tabletop 1 pc.

Provided with brackets

Item number:

Tabletop with cutout for wash basin: 50*50670-213




Tabletop without cutout for wash basin: 50*50670-225




Front fascia 50*50670-214 1 pc.

Provided with brackets

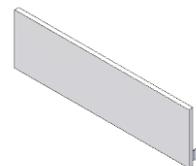

Wire baskets 3 pcs.

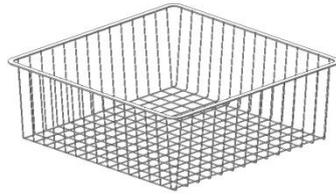

Bracket 50*50670-215: 3 pcs.
2 pcs. is mounted on the tabletop



Supporting foot 50*50670-218: 1 pc.



Bracket 50*50670-217 4 pcs.
2 pcs. is mounted on the tabletop
2 pcs. is mounted on the front fascia



Sink 97001342 1 pc.




Angle with coupling 1 pc.




Screw Ø4,8x9,5 torx 95091009: 20 pcs.




5. Mounting instructions

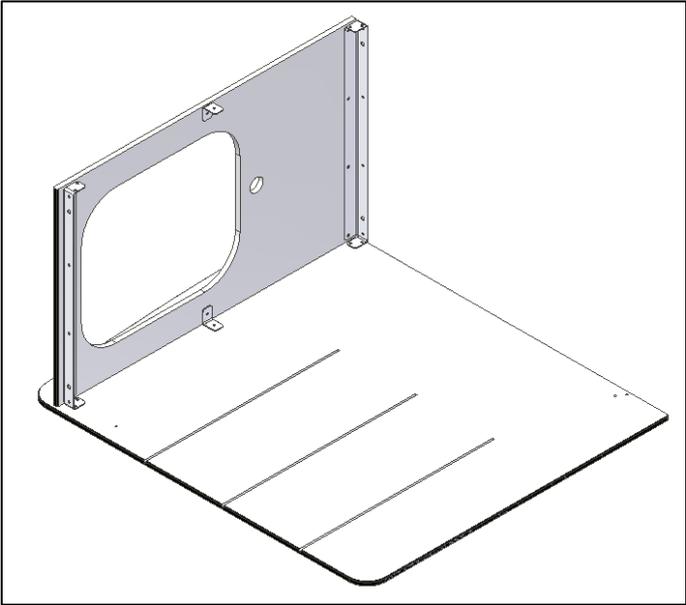


Mount tabletop to side cover.

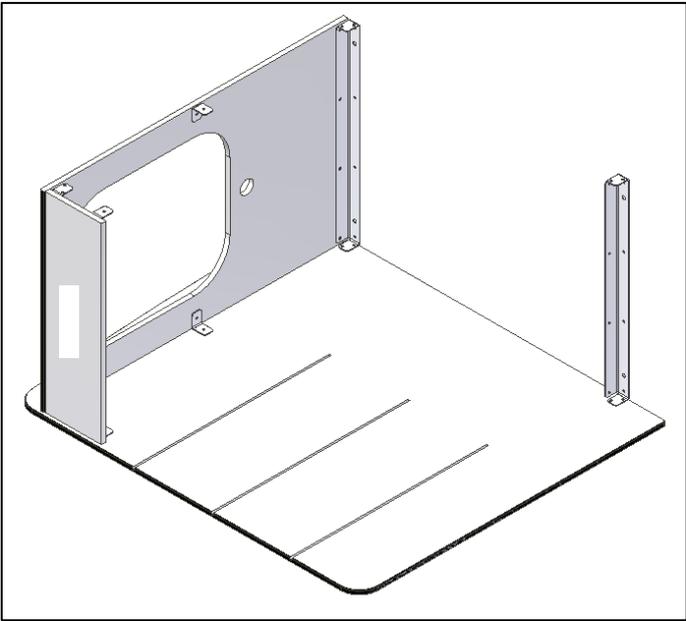


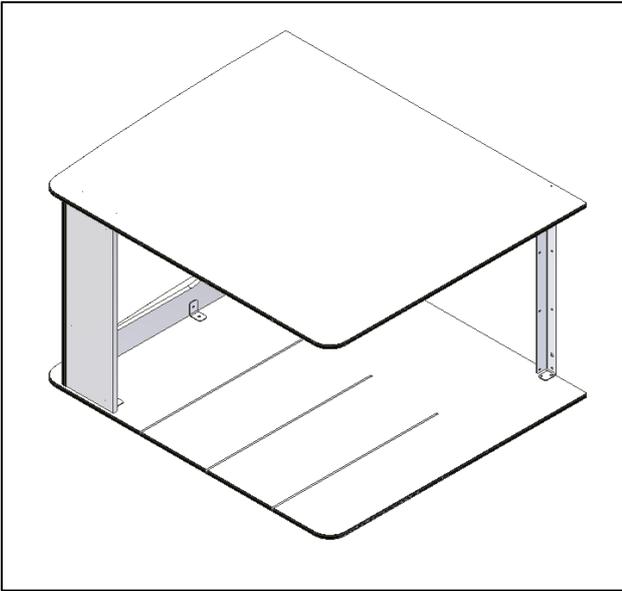

Mount opposite side cover.

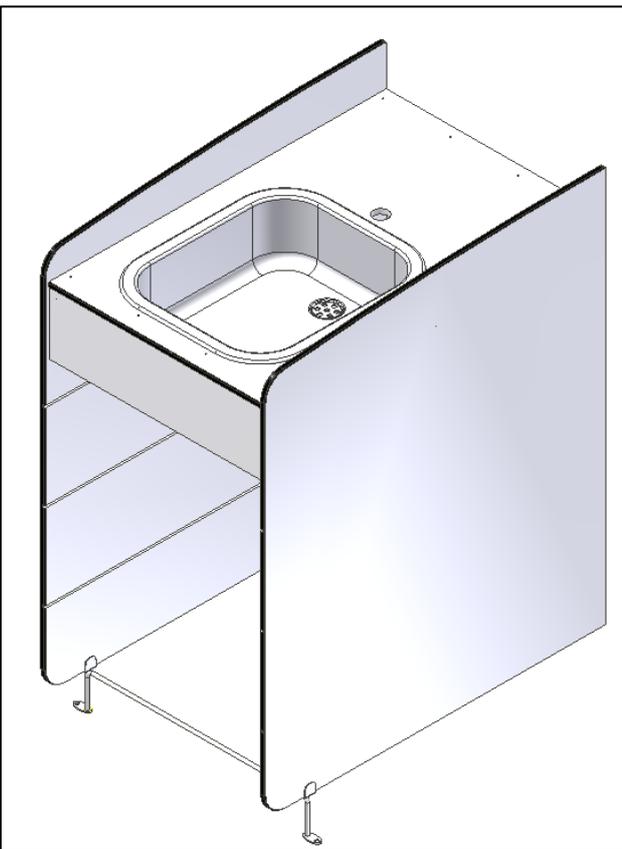

Mount supporting foot, sink and angle with coupling.

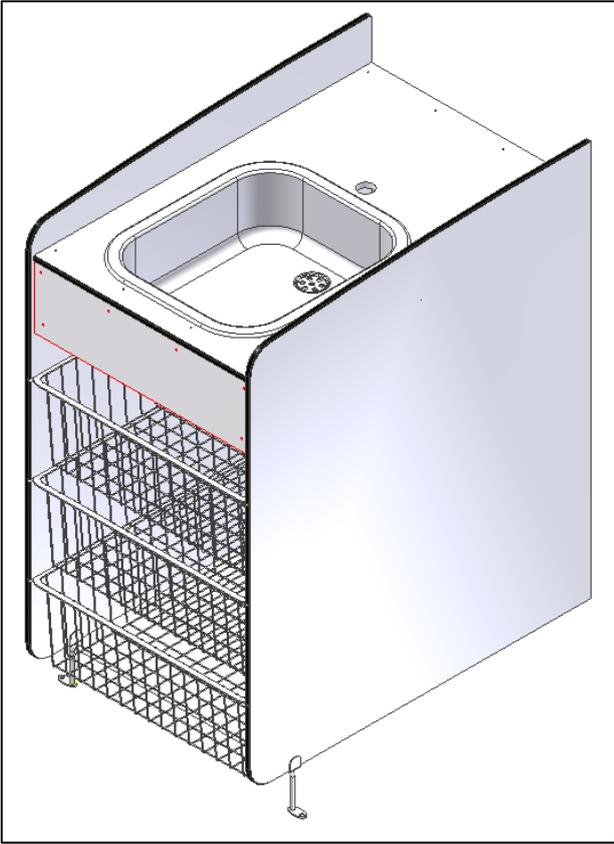

Fasten Basket unit to wall & mount wire baskets.

6. Cleaning/ maintenance

Ropox Basket unit are maintenance-free. However, for safety reasons we recommend regular inspection of all assembly bolts to ensure correct and secure fastening.

Cleaning:

Do not use a high-pressure washer to clean this product.
Simply use a soft cloth or sponge with soapy water of max. 60°C (pH 7) or cleaning alcohol.

Important:

Do not use scouring powder or other abrasives, as they will scratch the surfaces.
Also, avoid the use of cleaning utensils with sharp edges. Never use strong mineral acids or alkaline products.

7. Complaint

See General Terms of Sale and Delivery on www.ropox.dk

CE
ROPOX A/S

Ringstedgade 221
DK – 4700 Næstved
Tel.: +45 55 75 05 00
E-mail: info@ropox.dk
www.ropox.dk