

”Your cabinet comes down to help you reach in”



VERTIELECTRIC

YOUR KITCHEN CABINET WILL REACH NEW HEIGHTS

Electrical height adjustable system where the whole upper cabinet goes straight up and down and enables the user to reach items in the cabinets.

Ideal for very short people or wheelchairs users in private homes, homes for elderly people, institutions and others.


The system is especially useful for wheelchair users as the tabletop becomes free space when the cabinet is raised up.

You can combine other upper cabinets with the VertiElectric system.




Controlled by an integrated press pad in for example the kitchen fascia.


VertiElectric – frame for 40-50 cm wall unit,
 30-40604 – 30-40605

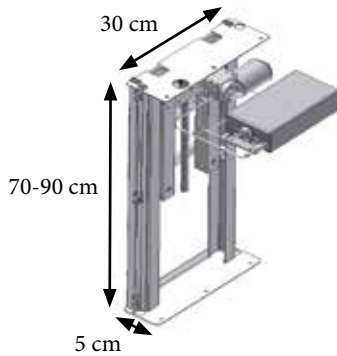


Unit sizes for wall unit

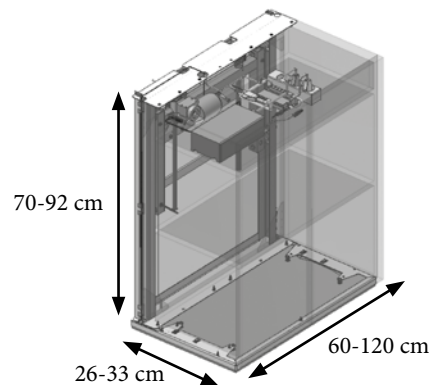

VertiElectric – frame for 60 cm wall unit,
 30-40606 – 30-40612

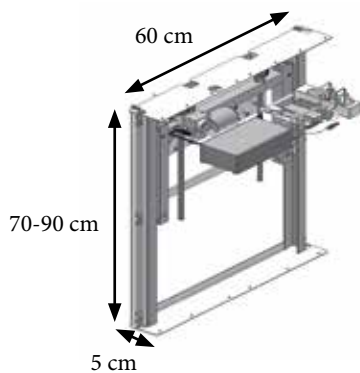


Unit sizes for wall unit
 30-40613 – 30-40618

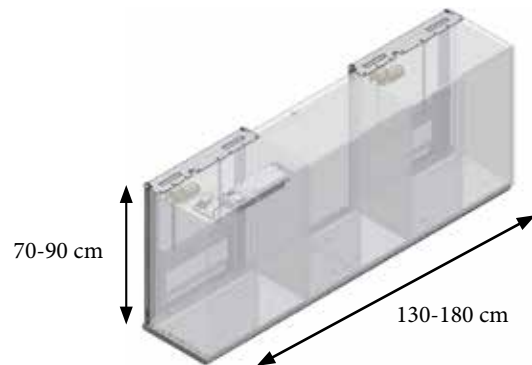

ACCESSORIES

Safety stop plate



Press pad,
 large, 14x7 cm
 30-67841



Smart box
 30-69002



LED spot in safety stop plate
 Contact Ropox for itemnumber



Tips:

- We recommend double doors for cabinets with a width from 60 cm to prevent the users from stepping back in order to open the doors.
- Allow 3-5 mm free space on each side of the upper cabinets so they easily can go up and down.
- We always recommend safety stops for electric frames.

ROPOX A/S · RINGSTEDGADE 221 · 4700 NÆSTVED, DENMARK
 PHONE: +45 5575 0500 · INFO@ROPOX.DK · WWW.ROPOX.COM

ROPOXTM
 BETTER WAYS TO BETTER DAYS