

## YOUR KITCHEN CABINET COMES FORWARDS AND REACHES NEW HEIGHTS

Electrical height adjustable system Diagonal is a system of cabinets that runs diagonally down and forward in one movement in order for you to reach the contents of the cabinets

Ideal for users of slight stature and for wheelchair users at home, in sheltered accommodation or nursing homes.

Especially for people with limited reach it is an advantage that the cabins run diagonally down and forward so the limited reach is not so long.

You can combine more upper cabinets in one system by using the Diagonal system.

Movement of the system is by push button, normally mounted into the worktop fascia.


Smartbox for connecting the safety systems of several units – In principle, the collision protection devices of one or more Verti-Inside, VertiElectric, DiagonalElectric and FlexiElectric can be connected. Each system requires its own Smartbox.

Note: Smartbox cannot be combined with FlexiPlus.

\* Disclaimer; "only applies when table top or cabinet moves up into another smartbox-conected safety strip or safety stop plate".



With the safety stop plate, the danger of trapping is reduced.

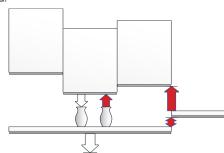

Smartbox installed to avoid trapping during upwards movement\*




## DIAGONAL


43 cm down


DIAGONAL – frame for 40-50 cm wall unit, Item: 30-40904 – 30-40912

70 cm 40-120 cm 11.5 cm

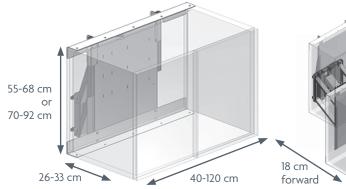

DIAGONAL – frame for 130-150 cm wall unit, Item: 30-40913 - 30-40918

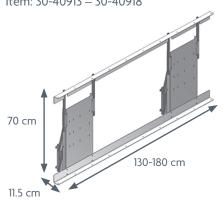

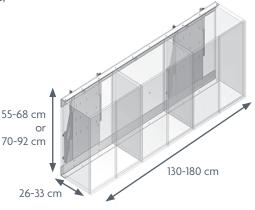

## **ACCESSORIES**

Ropox Bluetooth . Item: 30-90591

TIPS:

Press pad, large Item: 30-67841



Smartbox Coupling safety stop Item: 30-69002



Safety stop plate Cabin width 40 to 120 cm Item: 30-41604 to 30-41612



Safety stop plate with LED spot Cabin width 40 to 120 cm 1 spot Item: 30-42604 to 30-42606 2 spot Item: 30-42607 to 30-42612



Safety stop plate, double plate Cabin width 130 to 180 cm Item: 30-41613 to 30-41618



Safety stop plate with LED spot Cabin width 130 to 180 cm 3 spot Item: 30-42613

4 spot Item: 30-42614 to 30-42618



to make sure that the cabinets can run freely up and down. • We always recommend safety stops for electrical frames.

• We recommend double kitchen doors for cabinets for

move back to open the doors.

widths from 60 cm. In that way the users don not need to

Allow 3-5 mm of space on each side of the upper cabinets

NB! Find more information about measurements, technical data, installation interfaces and much more under the product and in the instruction manuals on our website.