



”Ideal washbasin when space is limited”

## ROPOX QUICKWASH

### A HEIGHT-ADJUSTABLE WASHBASIN THAT CAN PROJECT OFF THE WALL

QuickWash is a height-adjustable washbasin with the ability to project off the wall. The sink can be lowered 14 cm (5.5”) from its fixed point and move 10 cm (4”) out from the wall.

It is an ideal solution for wheelchair users because it gives them the much-needed additional room for the legs. When the sink is projected out and down, wheelchair users get 63 cm (25”) legroom under the sink, allowing them to get close to the washbasin and reach the tap.

The height is adjusted with a release handle which also can be used as a towel holder. It requires very little effort to lower and raise the washbasin. The position lock secures that the basin is securely fastened.

QuickWash does not require electricity, and it comes preassembled, making it easy to install. The cost-effective solution is perfect for small bathrooms, and the clean, simple design makes it a good fit for private homes.



**ROPOX™**


BETTER WAYS TO BETTER DAYS

- A PART OF AddLife®

# ROPOX QUICKWASH

Height adjustment: 14 cm  
Movement out: 10 cm  
Max. user weight: Testet acc. to DS/ISO 7966:2016  
(see max. user weight below)

## VARIANT/MODEL

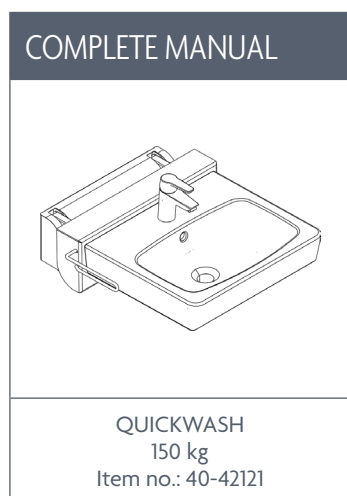

Mixer tap and plumbing kit is included with the washbasin.

## ACCESSORIES

Plug with overflow  
Item no.: 40-40935



Mixer tap with  
loop-lever 180 mm  
Item no.: 40-44039



One-handle mixer tap  
Item no.: 40-44040



Touchless mixer tap  
Item no.: 40-44045



**NB!** Find more information about measurements, technical data, installation interfaces and much more under the product and in the instruction manuals on our website.

The items are produced according to the following Standard: DS / ISO 17966:2016

ROPOX A/S · Ringstedgade 221 · 4700 Naestved, Denmark – Phone: +45 5575 0500 · info@ropox.com · www.ropox.com

**ROPOX™**

BETTER WAYS TO BETTER DAYS

– A PART OF AddLife