



KITCHENS FOR INDEPENDENCE

ACCESSIBILITY AND
FREEDOM IN THE KITCHEN



CONTENTS

- 04 THE MULTI-FUNCTIONAL KITCHEN
We help to choose the right kitchen.
- 06 WORKING AT THE MOST COMFORTABLE HEIGHTS
Adjust the worktop height to suit the kitchen activity.
- 08 WALL CABINETS THAT COME TO YOU
We make sure everything is within easy reach.
- 10 ADVICE AND GUIDANCE ON KITCHEN LAYOUTS
There is more to Ropox than kitchen products.

”Enjoy life in your kitchen – no matter if you are tall or short, sit or stand”

BECAUSE EVERYDAY LIFE IS IMPORTANT

Cooking and daily kitchen activities are important ingredients of our lives.

It is our goal that everyone can be free, independent, and safe in their own kitchen.

For more than 35 years, users around the world have enjoyed the flexibility and accessibility of Ropox kitchen systems. They give the freedom to do most activities independently. With our multi-functional kitchens, more people can cook together or share facilities and be part of the social activities that are so important in our daily lives.

Greater activity improves quality of life.



The multifunctional kitchen

ROPOX HELPS TO SELECT THE BEST KITCHEN

We are ready to help and guide you. Together, we can plan a kitchen with optimal space utilization. Involve us from the moment you plan your house and utilize our 35 years of experience. Together, we match your needs and make sure that the end result is perfect.


Multi-functional kitchens are flexible and offer a wide range of individual solutions for sheltered housing, special schools, nursing homes, training and institutional kitchens, private homes etc. All height-adjustable systems can be hidden and operated either electrically or manually. Easy to fit, the systems are stable and safe and made only of top quality materials.



Ideal both as dining and work table.



Custom-made solutions can be produced.

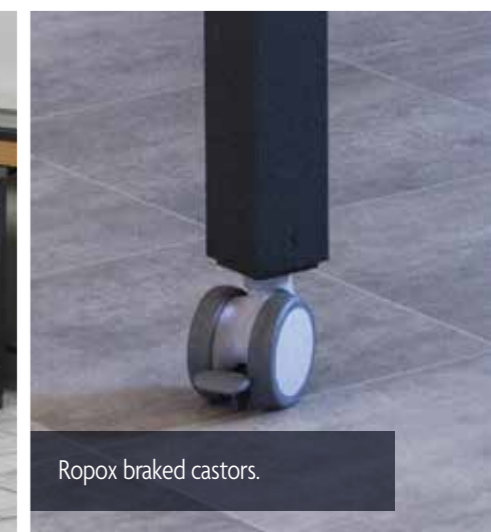

Ropox braked castors.

ROPOX 4Single frame

- Ideal for the whole family – adults, children and wheelchair users.
- Can be used for a multitude of activities in the kitchen like computer work or art as well as food preparation.
- Two height ranges of 300mm (550-850, 650-950mm).
- Adjust the height simply by the push of a button or by using a winding handle or remote control.
- We make the frame to the size of any kitchen worktop or dining tabletop - up to 3000 x 2000mm.
- Hobs and sinks can be integrated as needed.
- Optional braked castors make it easy to move the table, but standard adjustable feet or hidden floor fixings can be used.
- A rechargeable battery solution means the electric version is easily mobile.
- Fully charged batteries can last up to 3 months.
- The frame is designed to withstand a load of up to 150kg (250kg heavy version).



Ropox worktop systems

THE WORKTOP REACHES NEW HEIGHTS

Having the worktop adjusted to the perfect height, makes a big difference for each activity. Different heights are needed to knead dough, stir pots, chop vegetables or wash up.

It's a huge advantage to be able to adjust the worktop height – whether standing or seated, promoting self-sufficiency and optimal working conditions in the kitchen. What's more, our solutions offer seated users more leg space and the freedom to move around with ease.

FlexiCorner worktop giving easy height adjustment for one person use.



ROPOX FlexiElectric/FlexiManual/FlexiCorner

- FlexiElectric is optimal for frequent and independent use. FlexiManual for less frequent adjustment.
- Ideal for private homes, schools, training kitchens, sheltered housing, nursing homes etc.
- All types of kitchen worktops can be fitted to the frames in lengths from 600 – 3000mm.
- FlexiCorner suits single person use and can be any size up to 3000x3000mm.
- Sinks and hobs can be integrated in the worktop.
- Easy to adjust in height, manually or electrically.
- Concealment panels can hide the legs and plumbing or use leg covers for extra access space.
- For added safety we always recommend safety stops for electric systems to avoid the risk of trapping.
- Smartboxes are used to link safety systems where moving worktops are adjacent or have wall cabinet systems above.



ROPOX FlexiBasic

- Ideal for places where occasional height adjustments may be needed.
- Good, cost efficient solution for sheltered housing and homes for disabled people with multiple kitchens.
- Worktops adjustable by 300mm up to lengths of 3000mm (sinks and hobs can be integrated).
- Height adjustment using Ropox lifting unit which can be carried between kitchens by a caretaker/handyman.




ROPOX Worktop brackets

- For places with only rare requirements for height adjustment.
- Requires two people to lift and adjust the height.



Two separate worktops giving two different heights in the kitchen for two people.

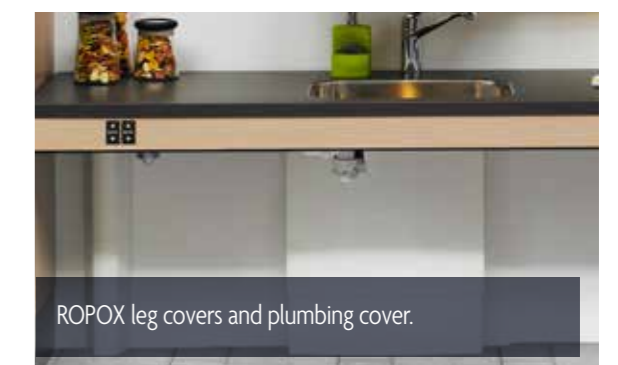

ROPOX leg covers and plumbing cover.



Ropox wall cabinets

WALL CABINETS THAT COME TO YOU

Our goal is to make it easy to see and reach everything in all wall cabinets – the solution you choose, will depend on ability to reach and if standing or seated. Maybe straight up/down movement brings everything into reach. To make things even easier the Diagonal brings the whole cabinet to the front of the worktop moving over the kettle, toaster or tap. A simple push of a button will adjust the height.

Safety stop plates beneath the units ensure nothing is trapped between the unit and worktop. Again, the needs and situation decide what's best. Together, we can find the perfect solution!

Safety stop plate with integrated spotlight.

Press pads for adjustment of wall cabinets and worktop.



ROPOX Vertilinside (electric vertical height adjustment)

- Fitted inside the cabinet (standard widths between 400-1000mm).
- An excellent adaptation solution for existing units.
- Invisible from the outside.
- Adjustable down by 495mm.
- Designed to withstand loads up to 80kg.
- Height adjustable shelves.
- Lighting can be integrated in bottom safety stop plate.



ROPOX VertiElectric (electric vertical height adjustment)

- Entire wall cabinet adjustable in height.
- Height adjustable down by 300mm.
- Height adjustment system invisible when cabinet is mounted.
- Frame depth only 50mm.
- Frame available in two models for cabinet widths from 400-1200, 1300-1800mm.
- Designed to withstand loads up to 80 and 120kg.
- Safety stop plate can be installed on the unit base to avoid the risk of trapping and lighting can be fitted.



ROPOX Diagonal (electric diagonal height adjustment)


- Adjusts in a diagonal motion – 430mm down, 180mm forward.
- Frame depth only 115mm, hidden when cabinet is mounted.
- Frames available for cabinet widths from 400-1200, 1300-1800mm.
- Designed to withstand loads up to 120/220kg.
- Lighting can be fitted in safety stop plate.



ROPOX Brackets for wall cabinets


- Brackets enable stepped height adjustment of wall cabinets for very occasional adjustment. Cabinets are lifted off and placed at another height.
- Fitted on the back of the cabinets and therefore invisible.
- Height adjustment of cabinets in intervals of 42mm.
- Designed to withstand loads up to 90kg.

HELP AND ADVICE ON KITCHEN LAYOUTS...

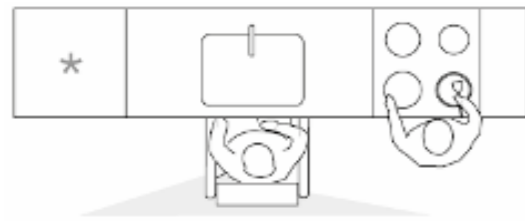

ONE-SIDED KITCHEN

- Two people can work next to each other.
- Plenty of space for assistance.

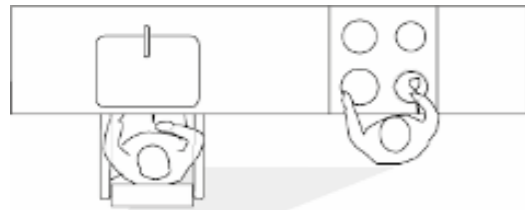


TWO-SIDED KITCHEN

- People with mobility impairments can lean on worktops on two sides.
- Two independent work places.
- Sink and cooking section should be installed on same side.
- May be difficult for wheelchair turning and movement.




L-SHAPED KITCHEN

- Seated and standing users could have independent work stations.
- Easy wheelchair access.
- Preparation area allows reach to sink and hob for easy movement of pans without moving position.

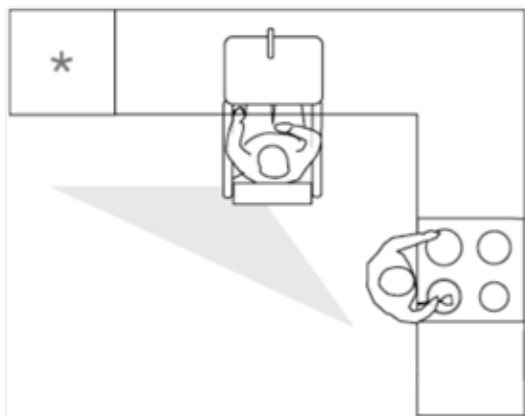


U-SHAPED KITCHEN

- Objects can be pushed along the entire worktop.
- Easy wheelchair access.
- Greater distances to cover between appliances.

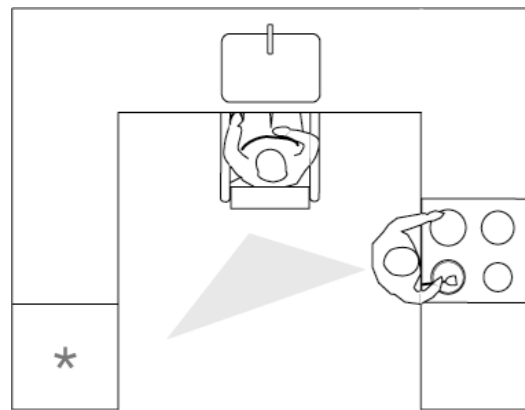


OPTIMAL HEIGHT TO REACH RATIOS...

ROPOX WALL CABINETS

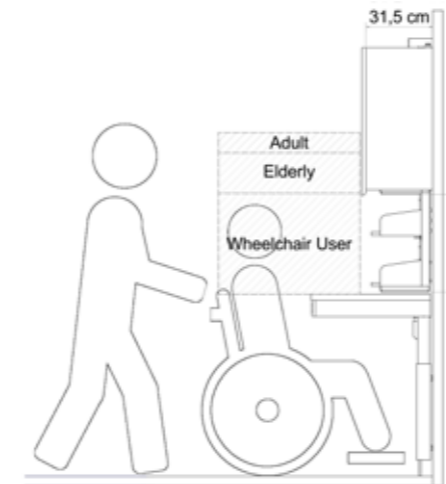


Ropox VertiInside

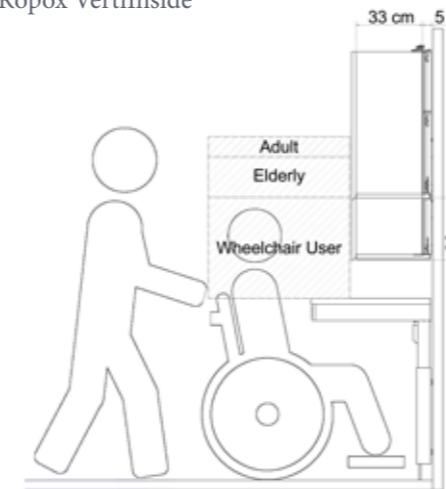

Ropox VertiElectric

OPTIMAL WORKTOP HEIGHTS

- Wheelchair users: 700-800mm
- Elderly: 850mm
- Adults: 900-950mm

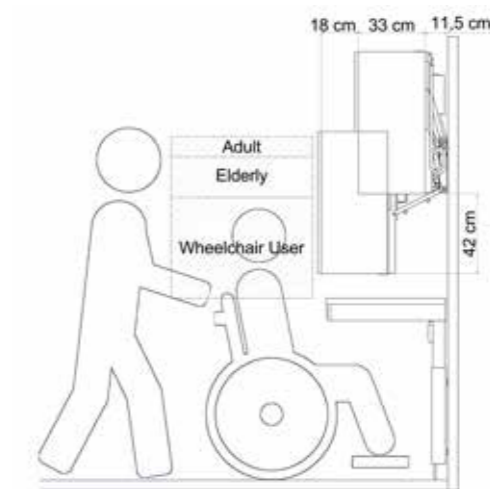

Ropox Diagonal

SAFETY IN FOCUS...



We recommend safety stop plates below all Ropox wall cabinets to avoid the risk of trapping. For further safety, wall cabinets can be connected to worktop frames via Ropox Smartboxes to avoid the trapping risk between wall cabinets and worktops, particularly when the worktops are moved up.



Ropox Smartboxes can avoid the trapping risk between height adjustable worktops installed next to each other. It's important that the side and front fascias have no worktop overhang.



Ropox safety strips ensure that worktops don't just stop, but reverse their movement immediately when activated.

ABOUT ROPOX

Freedom and confidence to be independent

People with disabilities deserve a better life with more self-esteem, quality, and the freedom to safely look after themselves. This philosophy has been our goal since we set up our business back in 1962.

We are amongst the world's leading specialists and producers of assistive devices and furniture for the disabled as well as equipment for ergo and physiotherapy rehabilitation. Our products are recognised and appreciated around the world for their high quality, flexibility, and accessibility.

Ropox has 60 employees and is represented in four continents of the world.

For more than 50 years we have created a wide range of products for people with disabilities. Today - thanks to our long experience - we have a unique know-how about accessibility and work environments.

For more information, contact Ropox or one of our representatives at www.ropox.com



Copyrights © All Rights Reserved Ropox A/S 2015

ROPOX TABLES

BEAUTIFUL HEIGHT-ADJUSTABLE TABLES FOR INDIVIDUAL NEEDS

ROPOX KITCHENS

FLEXIBLE AND HEIGHT-ADJUSTABLE KITCHENS

ROPOX BATHROOMS

INNOVATIVE AND EXCITING PRODUCTS IN A BEAUTIFUL COHESION

ROPOX NURSING TABLES

SAFE AND FLEXIBLE SOLUTIONS IN AN ERGONOMIC DESIGN

ROPOX A/S · RINGSTEDGADE 221 · 4700 NÆSTVED, DANMARK
TLF.: +45 5575 0500 · INFO@ROPOX.DK · WWW.ROPOX.COM

ROPOX
BETTER WAYS TO BETTER DAYS